

Skelex **Neck**

# Things are looking up

The Skelex Neck Support lessens the use of neck and shoulder muscles when working overhead, limiting injuries. Experience up to 40% reduction in cervical strain!

The Neck Support will be delivered with two anchoring options to match different user preferences. It can be used stand alone, but also seamlessly pairs with Skelex 360 and other exo's for optimal comfort.



## **Freedom to move**

Engineered to support your head without restricting your range of motion — so you stay agile and precise. Its ergonomic design offers flexible support across a wide range of cervical spine movements.

## **Quick fit design**

Fast to put on, easy to take off. Designed for real-world use, with intuitive straps and clips that get you going in seconds. Thanks to this adjustable strap system, it also helps correct poor posture during physical labor. When you perform mid-range to overhead work, we strongly recommend to consider combining your Neck support with a Skelex 360. This will optimize your productivity while reducing strain and fatigue in your upper limbs.



# How to wear

## Standalone

The Neck Support can be used as a stand alone support tool for your neck. Just click the carbiners on to your belt or loops at your pant, or choose to wear it comfortably while connected to the chestbelt.

## Combined with Skelex 360

The neck support can be seamlessly connected to your Skelex 360 exoskeleton. This ensures optimized support by aligning the neck module with the shoulder and upper-body support system, distributing load more effectively across your body.



## Suspenders

Attach the suspenders securely to the front of your trousers. Adjust and tighten the straps to ensure a comfortable fit. Make sure the Neck Support rests naturally on your shoulders, without pushing your head forward, allowing for proper posture and unrestricted movement.

## Chest belt


Fasten the chest belt just below your chest and tighten it securely. Ensure the belt is snug enough—if it's too loose, it may slide up when you tilt your head backward.

# Features and functions

## Adjustability

The Skelex Neck Support is designed as a one-size-fits-all solution, but there is an optimal range of body sizes to ensure the best fit and maximum effectiveness.

Staying within this range helps the Neck Support deliver the right comfort and protection, reducing fatigue and preventing injuries where it matters most.

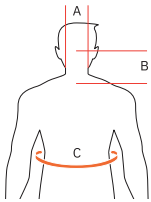

- A** Neck width: 10–16 cm
- B** Neck length: 11–19 cm
- C** Chest circ.: 75–120 cm
- D** Body weight: 40–100 kg

## Hygiene


For hygiene purposes, the Neck Support Padding is interchangeable. It can be easily removed and washed at 30°C.

Gently peel off the padding when needed, and replace it with either a cleaned or new one. The padding attaches securely with Velcro, ensuring a snug fit every time.

## Compatibility

Skelex Neck is compatible with:

- Skelex 360 R (000-0009)
- Skelex 360 S (000-010)
- Skelex W (000-0011)

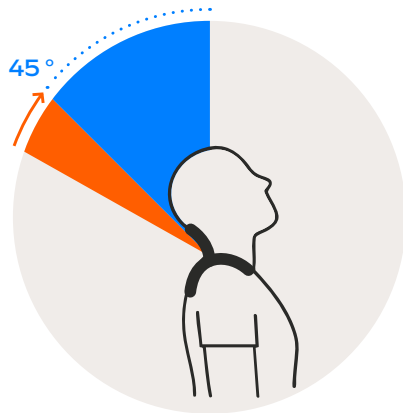

## Range of Motion with Neck Support

The illustration above shows the available head extension range when using the Neck Support. Its flexible frame provides 360-degree support, allowing natural head movement while offering gentle support.

As your head moves into a 45-degree or greater extension, the Neck Support engages to prevent excessive bending of the cervical spine, helping to safeguard your posture and comfort throughout the day. The neck support may not be compatible with most standard helmets, so please check the proper fit before wearing it at work.

# Specifications

**Product Name: Skelex Neck**

Article Number: 000-0008-1A

Article Number	Article name	Material	Warranty
000-0100	NS Padding	Skai leather	6 months
000-0101	NS Carabine strap (pair)	Nylon, Nickelplated Steel	6 months
000-0102	NS Chest Belt	Nylon, PC, Polyester 1680	6 months
2000-0319	NS Frame IM	ABS	6 months

Head support force:	Maximum 5 kg
Weight:	150 gram
Sizing:	One-size-fits-all
Certification	CE DoC Machinery Directive 2006/42/EC
Range of motion:	Unimpeded natural range of motion for the neck
Designed & Engineered in:	The Netherlands
Made in:	PRC

## Customer service

For any questions, issues, or support requests, please contact your dealer first.

If you do not receive a response within a reasonable time, you can reach out directly to us at [info@skelex.com](mailto:info@skelex.com).



Scan the QR code for more information about the Skelex Neck.

## Skelex BV

Saturnusstraat 95  
2516 AG The Hague  
The Netherlands

[info@skelex.com](mailto:info@skelex.com)  
+31 (0) 85 073 5790

[www.skelex.com](http://www.skelex.com)